


Wall Installation

Step 01 Level The Positions


Use a Plumb bob (Sahul) to level the position of GI Stud, Wooden Frame where you will place your panels. After that place another GI stud with centre of distance 600 mm.

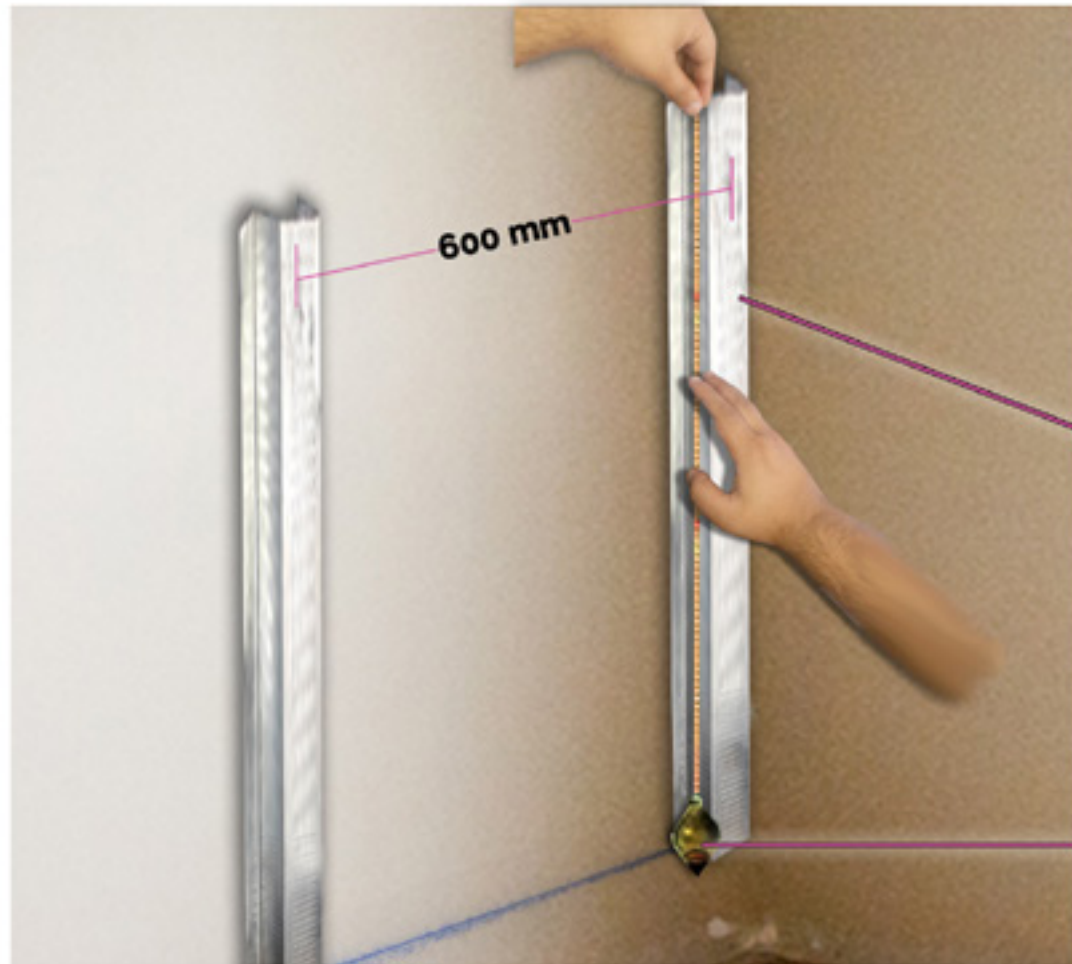

GI Stud / Wooden Frame

Plumb Bob (Sahul)

Wall Installation

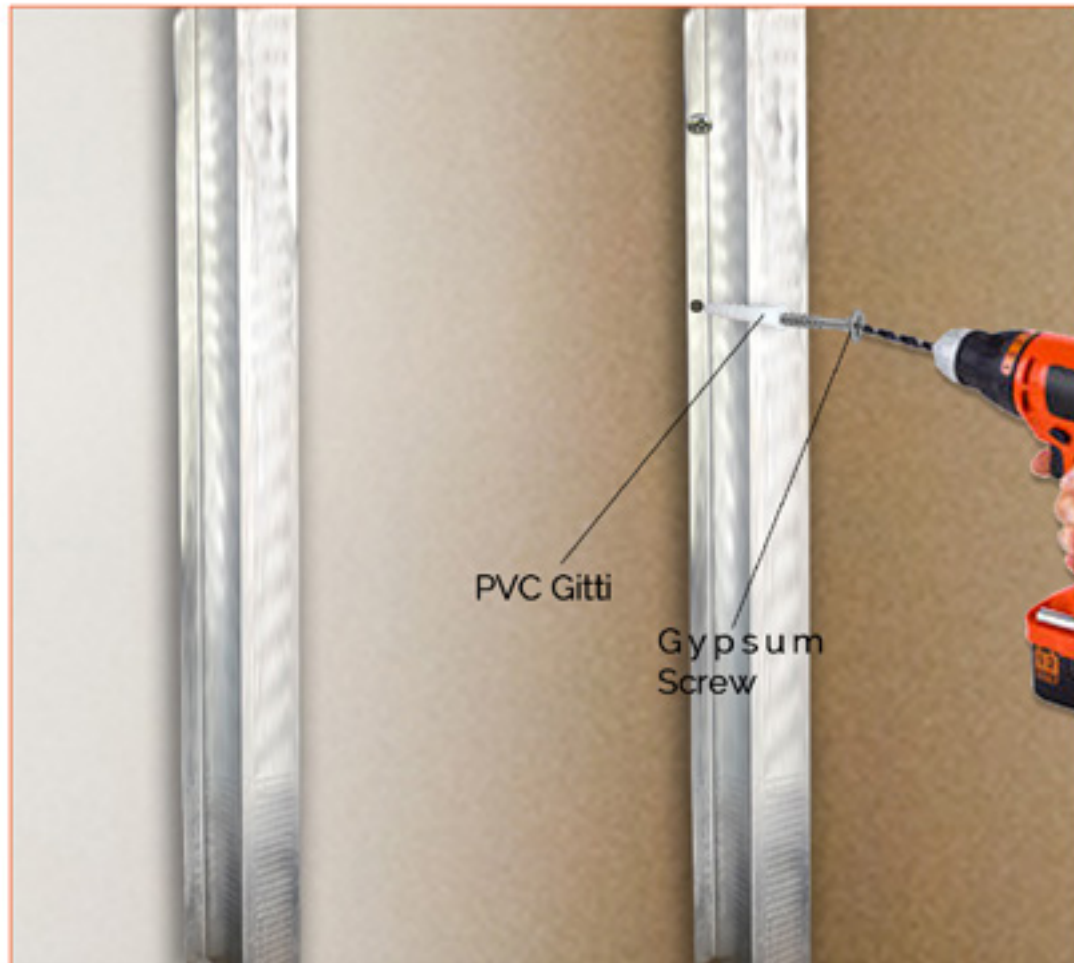

Step 02

Install GI Stud

Using the drill screw your GI studs, Wooden Frame into place. Keep screw spaced at least 10 inches apart.

Wall Installation




Step 03

Building GI grid

Repeat steps 1 and 2 for framing your GI, Wooden wall Studs.

Wall Installation

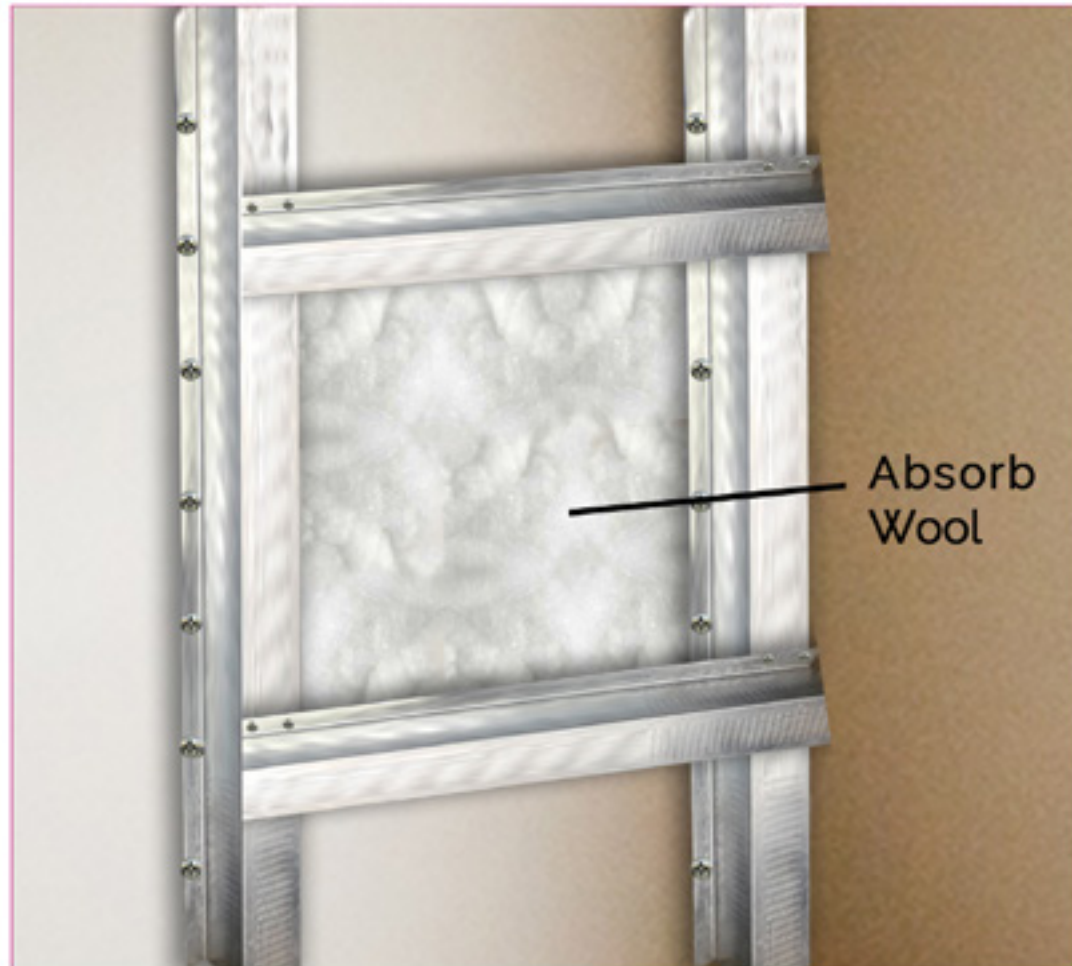


Step 04

Adhesive for bonding of
Absorb Wool

After framing GI, Wooden wall studs, Carefully place the Absorb Wool through adhesive for bonding.

Wall Installation

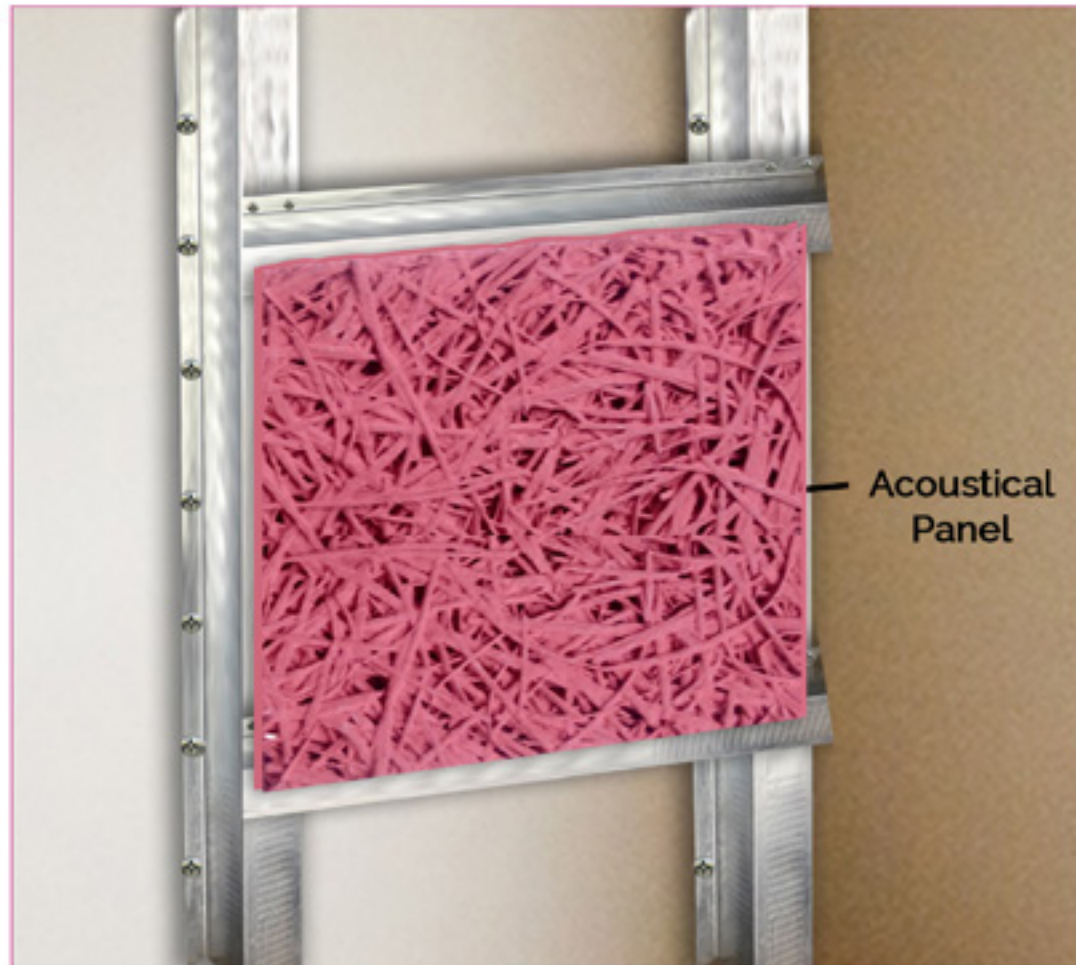

Step 05

Placing Acoustical Panel

After the bonding of absorb wool, Place your acoustical Panel above the absorb wool through screws.